


Guide for Setting Up the DIN-RYx hardware for use with CFLink communication

NOTE : CFLink wiring is only to be connected to **RS485-In** port.

1. Please refer to the diagram below for wiring guide for connecting from another CFLink port.

*** Please take extra note on the 24V DC power - do not connect into the RS485-In port of the DIN-RY unit or might damage the unit.**

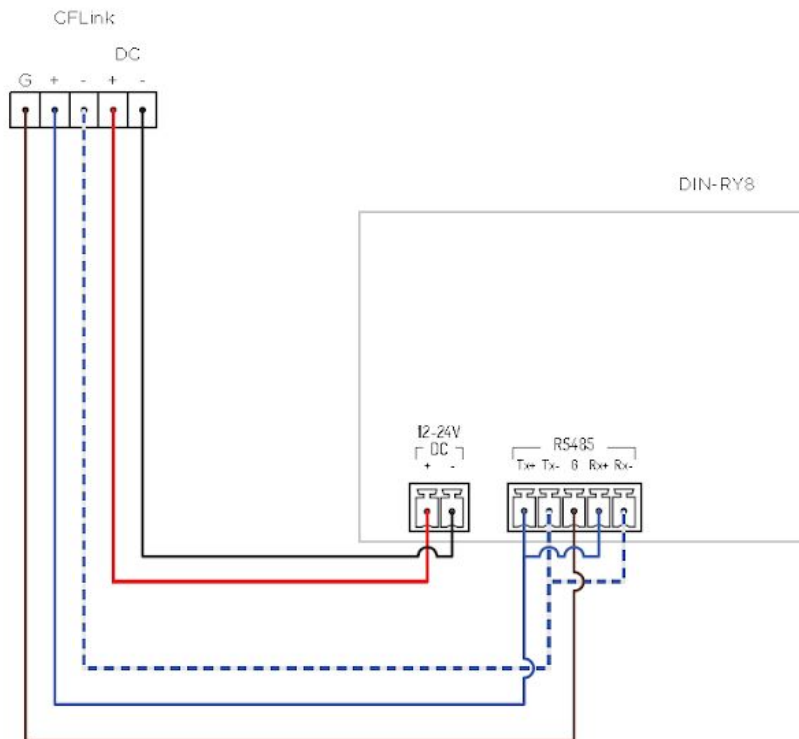

2. Use latest firmware v2.9.1b for DIN-RYx
3. Set up the RS485-In port to CFLink Mode:
`\\F2\ID\F3CCFXSPC\F4P02:CFL:115200:8:N:1:0\F5\F5`
4. To communicate with DIN-RY units using DIN-RY config tool, connect to LAN Bridge's IP Address and default port 10207(or any other CFLink configured slot number)